




CENTER DRAIN

1. Determine the shower area drain center from stud-to-stud.
2. Record the dimensions.
3. Take the width dimension (23") and multiply by 2 ($23 \times 2 = 46$)
4. Take the depth dimension (17") and multiply by 2 ($17 \times 2 = 34$)
5. A 34 X 46 base (or larger) is needed to achieve your dimensions. Consult the EZ ShowerBase Size Chart.


Order - EZ3648C and 48" EZ Curb

See Installation Page for
Trimming Instructions

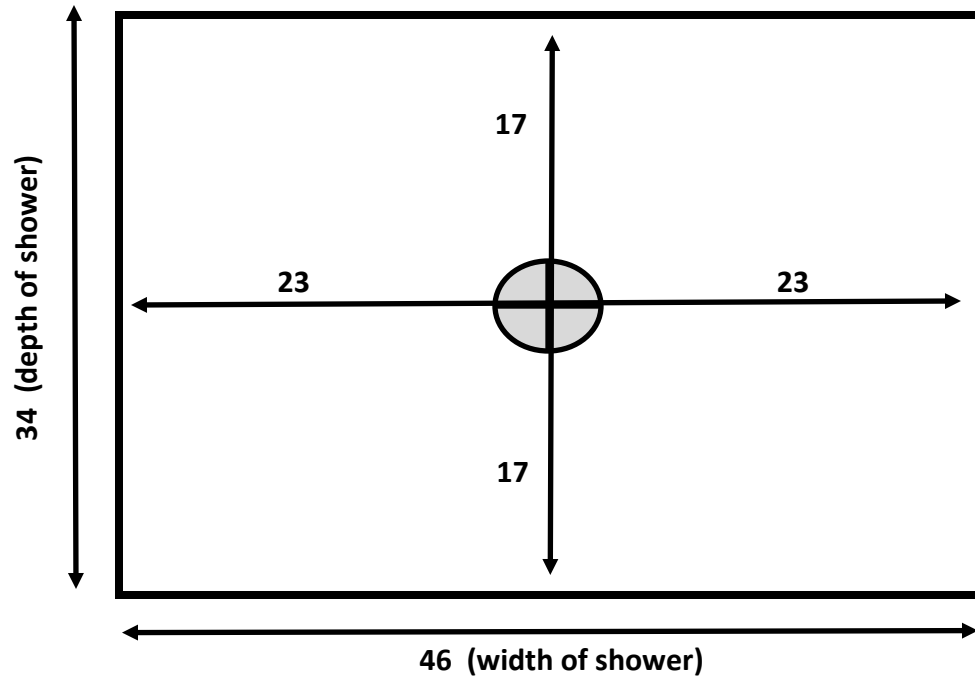

Shower Entrance

1° Slope to Shower Floor

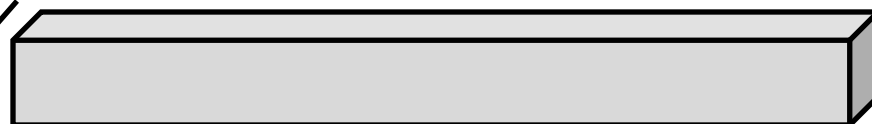

4 X 4 X 46 EZ Curb